




Drive staple about half its length into brace post about 4 inches above brace member on opposite side from brace.

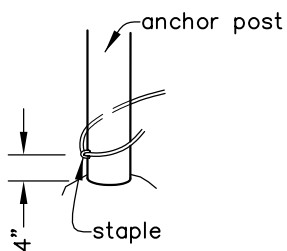


Drive staple in similar manner on anchor post about 4 inches from ground line opposite side of brace.

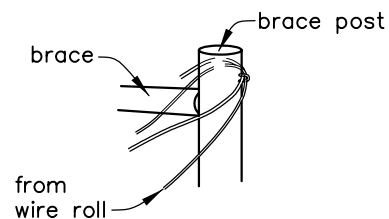


Unroll enough brace wire for two complete loops around anchor and brace post.

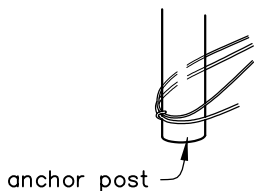


Thread end of brace wire through one staple and then through the other. Repeat to from three wire strands.

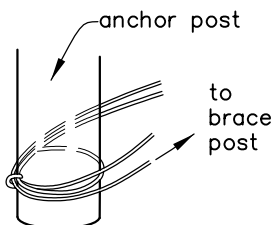

Wrap wire around anchor post and return toward brace post.

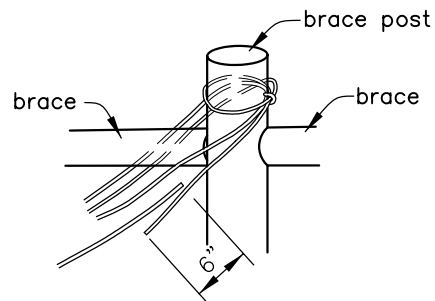

Cut brace wire from roll allowing enough wire to wrap around brace post and extend 6 to 12 inches past other wire end. Make splice.

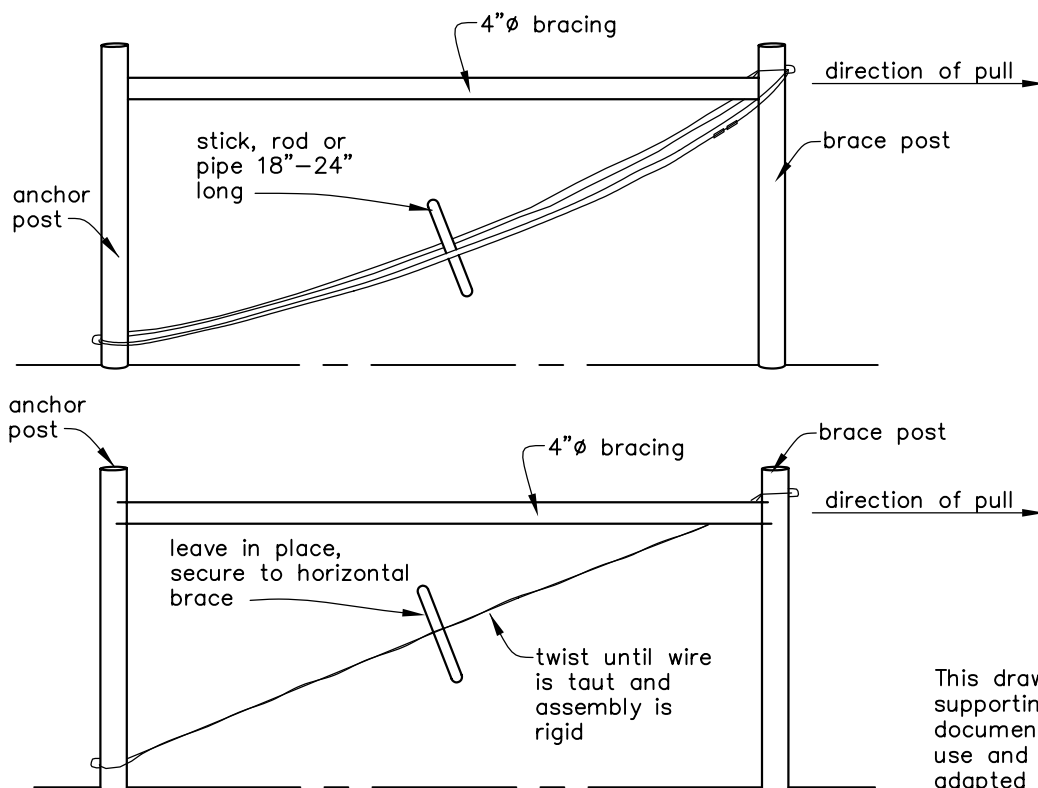

BRACE

This drawing requires supporting technical documentation prior to use and must be adapted to the specific site.

Drawing not to scale.

Designed _____	Date _____	CAD FILE NAME OR_WIREBRACE1.DWG
Drawn _____	2/2005	DRAWING NO. _____
Checked _____	_____	SHEET _____ OF _____
Approved _____	_____	_____

WIRE FENCE BRACES

LIVESTOCK FACILITIES



U.S.D.A. NATURAL RESOURCES CONSERVATION SERVICE